



OSD Control Board CN2 Pin Assignment	pin #	description
10	Common Ground	
9	Select Up	
8	Select Down	
7	Adjust Up/Increase/Right	
6	Adjust Down/Decrease/Left	
5	Menu	
4	Brightness Down	
3	Brightness Up	
2	ON/OFF	
1	Common Ground	


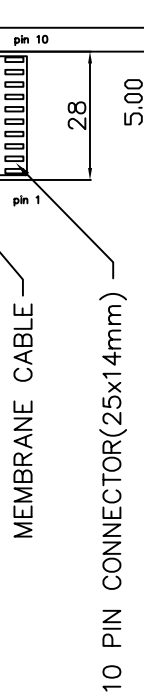


FRONT VIEW

Membrane Switch:
P/N:356301022-3

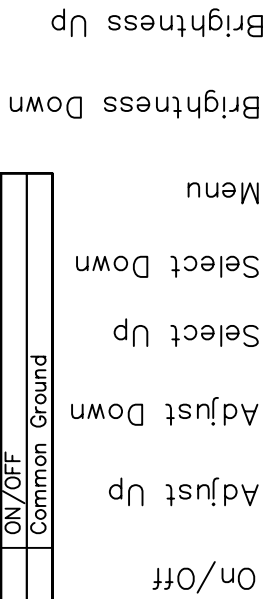

PCB OSD Control Board CN1 Pin Assignment	pin #	description
12	no connection	
11	OSD Select UP	
10	OSD Select Down	
9	OSD Plus/Right	
8	OSD Minus/Left	
7	OSD Menu	
6	Ground	
5	Backlight Brightness	
4	VR pin B	
3	Backlight Brightness	
2	VR pin A	
1	Power Switch B	

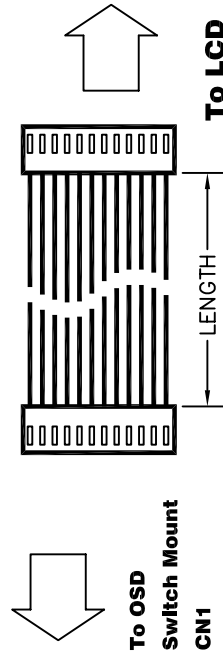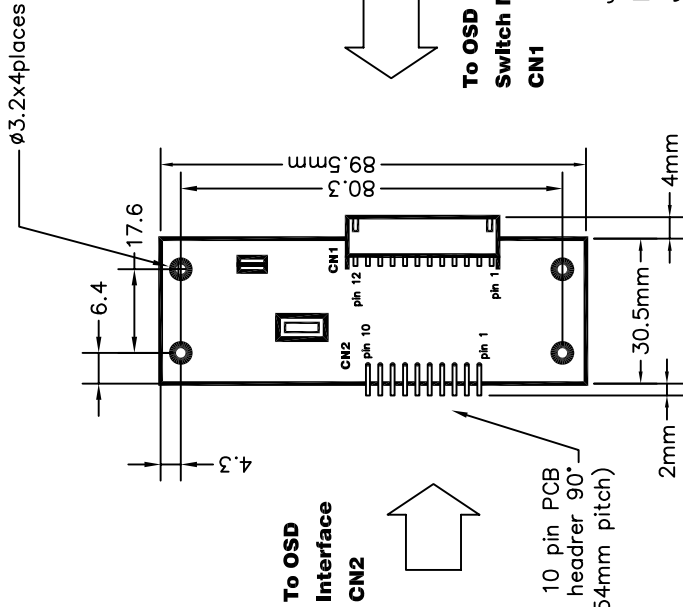

Jumper setting on OSD interface
DEFAULT POWER
 JP1 : 1-2 closed - OFF
 2-3 closed - ON
BRIGHTNESS INC/DEC SWITCH
 JP2 : 1-3 & 2-4 closed - SWAP
 1-2 & 3-4 closed - NORMAL

OSD cable:
P/N:426120400-3 (12/12 WAY), 300mm



Title:
KIT 60134-3 OSD KIT

NOTE:
All dimensions are in mm

Date:
22 DEC 06

Kit 60134-3 OSD KIT